


-A-R-T-E-M-

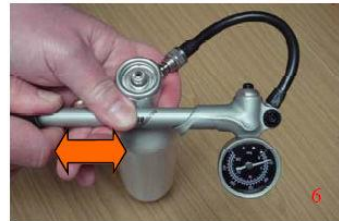

Only use the recommended Smoke Fluid Smoke Oil 135 — Artem

- Unscrew Aerosol Cap
- Add 250 – 350 ml of the appropriate Smoke Oil
- Ensure the dip tube is fitted to the Aerosol Cap (so Smoke Oil will cover the open end of the dip tube when the can is upright)
- Replace Aerosol Cap / Dip Tube & screw down until the rubber seal bottoms out, then continue to screw in a further 1/8th of a turn to create a seal.
- Using pressurizing Schrader valve on the side of the Aerosol Cap then pressurize the canister to 80 – 90 psi
- (inert gas (Nitrogen / CO2 etc) or air can be used)
- For best smoke quality do not exceed 90 psi

When finished, invert the can so that the valve is facing down, & release all pressure by depressing Schrader valve – ensuring that the valve is pointing away from surfaces, remove aerosol cap and empty contents - refit cap but do not tighten